iSolution
Your integrated Solution

DMX512

LINKABLE
STAND ALONE

Marvelous Sound Activation

IM-575W

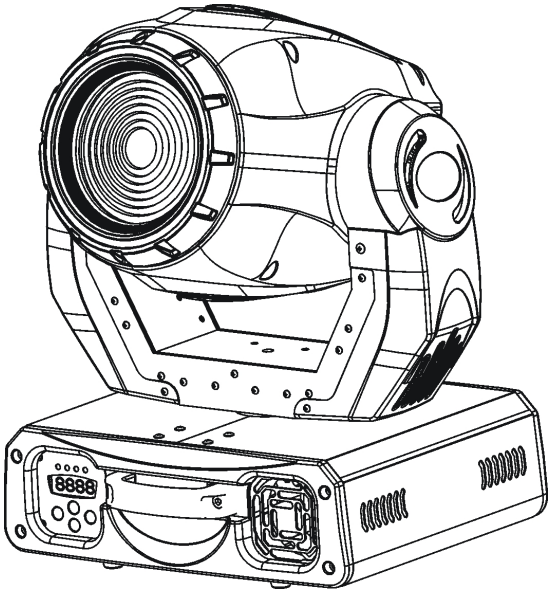

GUIDE D'UTILISATION

Lisez attentivement cette notice avant utilisation

TABLE des MATIERES

1. **Instructions de sécurité**

2. **Spécifications Techniques**

3. **Lampe**

4. **Comment commander l'unité**
   - Panneau de commande
   - Fonctions principales
   - Ajustement de la position initiale

5. **Comment contrôler l'unité**
   - Mode maître/esclave
   - Contrôleur CA 8
   - Contrôleur DMX iSolution / Contrôleur DMX Universel
   - Configuration DMX512
   - Connexion DMX512

6. **Dépannage**

7. **Nettoyage de l'unité**

1. Instructions de sécurité

Lire attentivement les consignes ci-après. Elles contiennent des informations importantes sur la sécurité de l'installation ainsi que sur l'utilisation et la maintenance de l'équipement.

- Conservez le présent manuel avec l'équipement pour référence ultérieure. En cas de vente de l'équipement à un autre utilisateur, il est important que le présent manuel soit joint à l'équipement afin que le nouvel utilisateur dispose des informations nécessaires à son utilisation et puisse prendre connaissance des mises en gardes relatives à la sécurité.
- S'assurer que l'alimentation est compatible à la tension locale.
- Cette lyre est livrée sans lampe. Il est nécessaire d'utiliser une lampe à décharge de type MSD 575W ou NSD 575W. En aucun cas, vous ne devez utiliser une lampe de type différent !
- Il est important de relier le conducteur jaune/vert à la terre afin d'éviter tout choc électrique.
- Cet appareil n'est conçu que pour une utilisation en intérieur. L'utiliser dans un endroit sec.
- L'appareil doit être utilisé dans une pièce bien ventilée et à au moins 50 cm des murs. Vérifiez que les fentes de ventilation de l'appareil sont bien dégagées.
- Débranchez l'appareil du secteur avant le remplacement du fusible ou de la lampe ou avant toute maintenance.
- Remplacez le fusible ou la lampe par un(e) de même type.
- Par sécurité, assurez vous qu'aucun produit inflammable ne se trouve à côté de l'appareil lors de l'utilisation.
- Utilisez des élingues de sécurité pour la fixation de l'appareil. Ne jamais manipuler l'appareil par la tête mais toujours par sa base.
- La température ambiante ne doit pas dépasser 40℃. Ne pas utiliser l'appareil si la température dépasse cette limite.
- La température de l'appareil peut atteindre 85℃. Ne touchez pas l'appareil à main nues pendant l'utilisation afin d'éviter des brûlures. Après avoir éteint l'appareil, laissez le refroidir 15 minutes avant toute maintenance ou changement de lampe.
- Si vous rencontrez des problèmes à l'utilisation, éteignez immédiatement l'appareil. N'essayez pas de réparer l'appareil par vous même. Les réparations effectuées par du personnel non qualifié peuvent engendrer des dommages. Il est important de contacter le revendeur pour toute réparation. Toujours utiliser des pièces de même type.
- Ne connectez pas l'appareil à un bloc de puissance.
- Ne touchez pas l'appareil pendant l'utilisation, il est alimenté par une tension dangereuse de 230V, vous pourriez recevoir un choc électrique.

ATTENTION

- Afin de réduire les risques de chocs électriques et d'incendies, n'exposez pas l'appareil à la pluie ou à l'humidité.
- Ne touchez pas la lampe à main nues, elle dégage une très forte chaleur après l'utilisation.
- Lampe très chaude, danger d'éclatement. Attendez quelques minutes après l'arrête de l'appareil.
- Ne démarrez pas l'appareil si la lampes n'est pas installée ou si l'appareil est visuellement endommagé.
- La carrosserie, les lentilles ou les filtres ultraviolet doivent être remplacés s'ils sont visiblement endommagés.
- Ne jamais regarder la source lumineuse en direct lorsque l'appareil fonctionne.

AVERTISSEMENT

- Il n'y a pas de pièces détachées à l'intérieur de l'appareil. Ne tentez pas de réparer ou d'ouvrir l'appareil par vous-même. Dans le cas où votre appareil nécessite une réparation, contactez votre revendeur.

INSTALLATION

- L'appareil doit être installé par le dessous de sa base grâce au système de fixation ci dessous. Utilisez des crochets pour la fixation à une structure métallique.
- Assurez vous que l'appareil est fermement accroché afin d'éviter vibrations et chutes lors de l'utilisation.
- Assurez vous que la surface à laquelle vous allez fixer votre appareil peut supporter une charge de 50 kg par appareil.
- Il faut par ailleurs toujours utiliser des élingues de sécurité capables de supporter jusqu'à 10 fois le poids de chaque appareil lorsqu'il est installé.

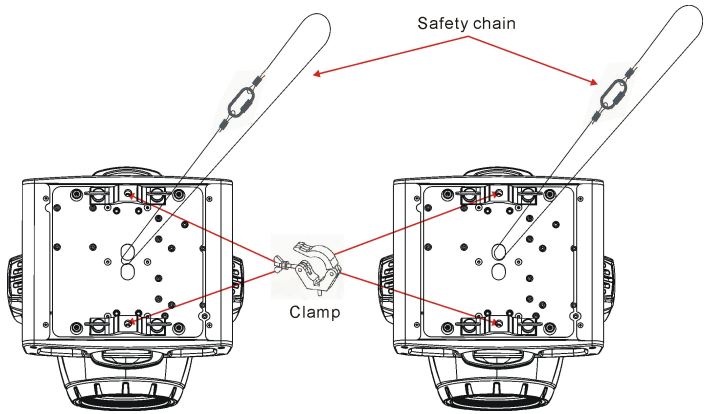

2. Spécifications Techniques

Alimentation
- AC230v 50Hz

Lampe
- MSD 575W OU NSD 575W

Système Optique
- Système optique haute performance
- Lentilles et couleurs dichroiques
- Focus automatique
- Angle d'ouverture : 11°~28°

Shutter/Dimmer
- Black out, dimmable de 0~100%
- vitesse de strob réglable de 1à environ 10 flash / seconde

Roue de couleur
- la roue de couleur comprend 9 couleurs dichroïques plus le blanc.
- la rotation rapide de la roue de couleur donne un effet rainbow.

Système de mixage de couleur
Cyan : 0 ~ 100 %, Magenta : 0 ~ 100 %, Jaune : 0 ~ 100 %

Roue d'effet
- Effet FROST et lentilles diagonales

Mouvement

- Pan: 540° en 2.8 secondes.
- Tilt: 270° en 1.6 seconde.

Canaux DMX
- Le protocole d'adressage est un DMX 512 standard, permettant un pilotage par toute console DMX universelle.

16 Canaux:

Canal 1 = Pan	Canal 9 = Yellow
Canal 2 = Tilt	Canal 10 = CMY color mix
Canal 3 = Pan/Tilt Speed select	Canal 11 = CMY speed
Canal 4 = Dimmer	Canal 12 = Effect wheel
Canal 5 = Shutter	Canal 13 = Zoom
Canal 6 = Color	Canal 14 = Pan 16 bit
Canal 7 = Cyan	Canal 15 = Tilt 16 bit
Canal 8 = Magenta	Canal 16 = Lamp on/off/Reset

8 Canaux:

Canal 1 = Pan
Canal 2 = Tilt
Canal 3 = Shutter
Canal 4 = Effect wheel
Canal 5 = Color
Canal 6 = CMY color mix / macro
Canal 7 = Dimmer
Canal 8 = zoom

Dimensions: 428 x 387 x 491 mm (L x l x H)

Poids: 30,5 kg

Intensité lumineuse:

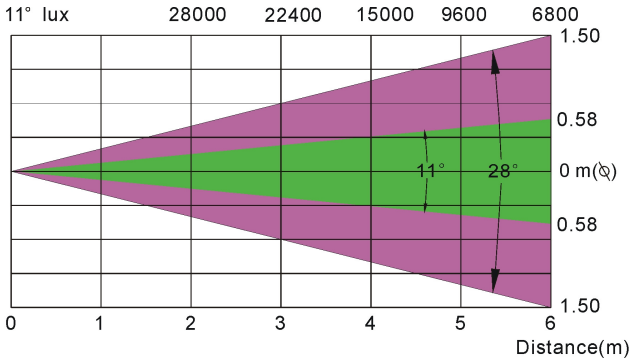

3. Lampe

En raison de sa pression interne élevée, il pourrait y avoir des risques d'éclatement de la lampe à décharge pendant l'opération.

La lampe émet un rayonnement UV intense nocif aux yeux et à la peau.
La luminance élevée de l'arc peut endommager considérablement la rétine de l'œil si la lampe est regardée en direct.

Type de lampe à décharge: MSD 575W ou NSD 575W.

1. Coupez toujours l'alimentation principale et ne manipulez jamais la lampe quand l'unité est chaude.

2. Ne touchez pas l'ampoule à mains nues. Si c'était le cas, nettoyez la lampe avec de l'alcool dénaturé et essuyez-là avec un tissu non pelucheux avant l'installation.

3. La lampe produit des rayons UV. Ne manipulez pas la lampe sans protection.

4. A l'utilisation, la lampe fonctionne à haute pression et il y a un léger risque de rupture du tube de l'arc. Le risque augmente avec le temps, la température et le mauvaise utilisation de la lampe.
N'utilisez pas la lampe plus longtemps que la durée indiquée.

5. Assurez vous que la lampe est placée au centre du réflecteur pour un rendement optimal. Ajustez la position de la lampe à l'aide des vis A, B et C.

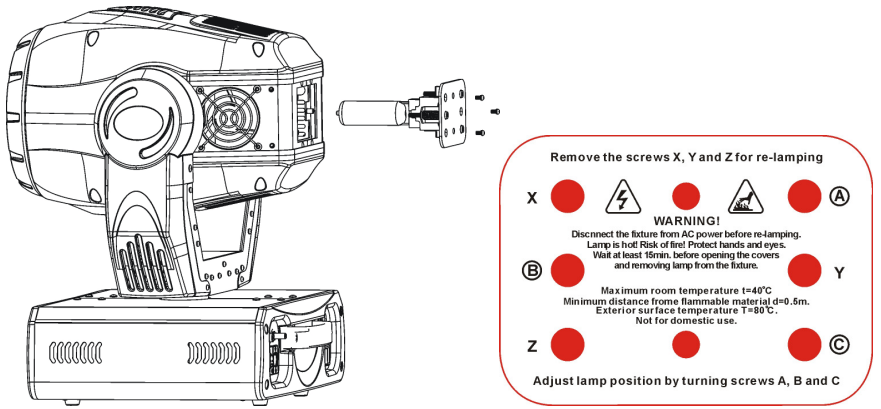
Remove the screws X, Y and Z for re-lamping
X
A
WARNING!
Disconnect the fixture from AC power before re-lamping.
Lamp is hot! Risk of fire! Protect hands and eyes.
Wait at least 15min. before opening the covers
and removing lamp from the fixture.
B
Y
Maximum room temperature t=40°C
Minimum distance frome flammable material d=0.5m.
Exterior surface temperature T=80℃.
Not for domestic use.
Z
C
Adjust lamp position by turning screws A, B and C

4. Comment commander l'unité

4.1. Panneau de commande

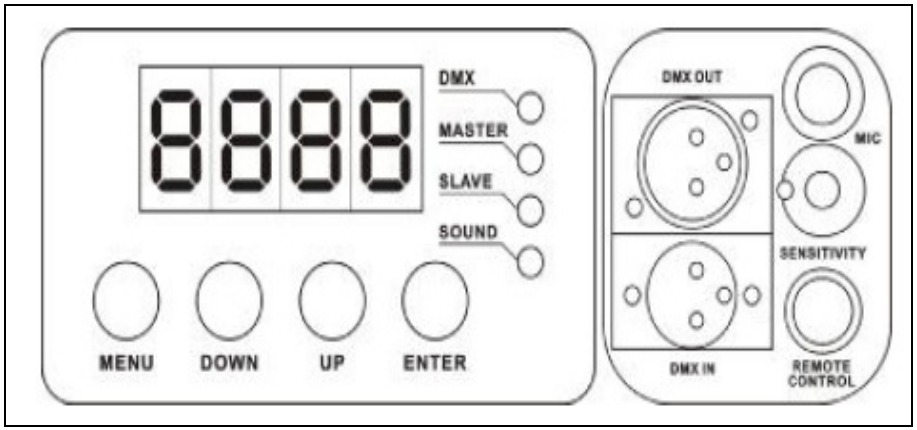

Affichage
L'affichage montre les différents menus et les fonctions choisies.

LED

DMX	**On**	**Entrée DMX présente**
MASTER	**On**	**Mode Maître activé**
SLAVE	**On**	**Mode Esclave activé**
SOUND	**Clignotante**	**Mode audio activé**

Bouton

MENU	**Pour choisir les différentes fonctions**
DOWN	**Pour monter dans les fonctions**
UP	**Pour descendre dans les fonctions**
ENTER	**Pour confirmer les fonctions**

Entrée télécommande
Pour relier une télécommande type CA 8 entrée Jack 6.35mm

Sensibilité
Pour ajuster la sensibilité du micro.

Microphone
Reçoit le signal audio pour l'activation sonore.

Entrée-sortie DMX
Pour le lien DMX512, utilisez des câbles DMX blindés avec prise XLR 3 broches.

4.2 Fonctions principales

Pour choisir des fonctions pré enregistrées, appuyez sur le bouton **MENU** jusqu'à ce que la fonction désirée s'affiche.

Choisissez la fonction en appuyant sur **ENTER** et l'affichage clignotera.

Utilisez **DOWN** et **UP** pour changer de mode. Une fois que le mode désiré a été sélectionné, appuyez sur **ENTER**, sinon il reviendra automatiquement aux fonctions principales après 8 s de non affectation.

Pour revenir aux fonctions appuyez à nouveau sur **MENU**. Les fonctions principales s'affichent comme ci dessous :

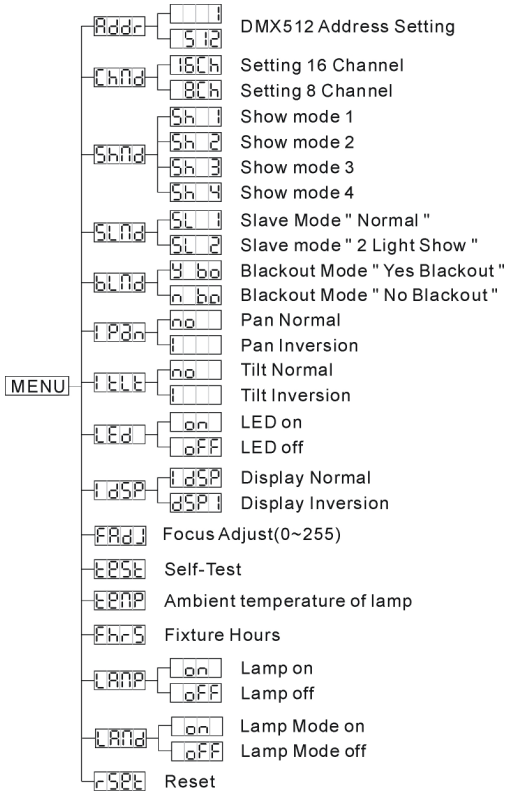

Addr Réglage de l'adresse DMX 512

Appuyez sur le bouton **MENU** jusqu'à se que s'affiche le mode Addr . Appuyez sur **ENTER** et l'affichage clignotera. Appuyez sur **UP** ou **DOWN** pour afficher le bon canal DMX.
Une fois l'adresse choisie, appuyez sur **ENTER**, sinon vous reviendrez automatiquement aux fonctions principales après 8 s de non affectation.
Pour revenir aux fonctions appuyez à nouveau sur **MENU**.

ChnD Mode Canal

Appuyez sur le bouton **MENU** jusqu'à se que s'affiche le mode ChnD. Appuyez sur **ENTER** pour valider. Appuyez sur **UP** ou **DOWN** pour choisir 16Ch (16 Canaux) ou 8Ch (8 Canaux).Une fois le mode choisi, appuyez sur le bouton **ENTER**, et si vous n'avez pas validé au bout de 8 secondes vous reviendrez au mode automatique. Pour revenir aux fonctions appuyez à nouveau sur **MENU**.

SHAd Mode Show

Appuyez sur le bouton **MENU** jusqu'à ce que SHAd s'affiche. Appuyez sur **ENTER,** l'affichage clignote. Appuyez sur **UP** et **DOWN** pour choisir Sh 1 (show 1) ou Sh 2 (show 2) ou Sh 3 (show 3) ou Sh 4 (show 4). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU.**

Sh 1 - le montage est placé au sol. Angle 210° de mouvement d'inclinaison.

Sh 2 - le montage est fixé sous plafond. Angle 90° de mouvement d'inclinaison.

Sh 3 - le montage est placé en face, l'unité projette toujours dans la direction de l'assistance ; c-à-d. devant. Angle de mouvement de PAN (gauche à droite) : 160°. Angle de mouvement d'inclinaison : 90° (60° au-dessus de l'horizon ; 30° au-dessous de l'horizon.)

Sh 4 - le montage est fixé sous plafond. L'unité projette principalement de face. Angle de mouvement de PAN (gauche à droite) :160°. Angle de mouvement d'inclinaison TILT : 90° (verticalement, 75° avant ; 15° arrière).

SLAd Mode esclave

Appuyez sur le bouton **MENU** jusqu'à ce que SLAd apparaisse sur l'affichage. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir SL 1 (normal) ou SL 2 (2 light show). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

bLAd Mode Blackout

Appuyez sur le bouton **MENU** jusqu'à ce que s'affiche bLAd . Appuyez sur **ENTER** et l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir Y bo (yes blackout) ou n bo (no blackout). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

IPAn Inversion Pan

Appuyez sur **MENU** jusqu'à ce que IPAn s'affiche. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir no (normal) ou I (inversion PAN). Une fois que le mode a été choisi, appuyez sur le bouton **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

ItLt Tilt Inversion

Appuyez sur **MENU** jusqu'à ce que ItLt s'affiche. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir no (normal) ou I (inversion TILT). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

LEd Afficheur à LED

Appuyez sur **MENU** jusqu'à ce que LEd s'affiche. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir on (Led on) ou oFF (Led off). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

IdSP Inversion Display

Installez l'appareil sur le sol ou au plafond. Appuyez sur **MENU** jusqu'à ce que IdSP s'affiche. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir dSPI (inversion du display affichage vers le sol) ou IdSP (affichage normal vers le plafond). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

FAdJ Ajustement du focus

Appuyez sur **MENU** jusqu'à ce que FAdJ s'affiche. Appuyez sur **ENTER,** l'affichage clignote. Naviguez avec les boutons **DOWN** and **UP** pour choisir la valeur (0~255). Une fois la valeur sélectionnée, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

tESt Mode Test

Appuyez sur **MENU** jusqu'à ce que tESt clignote sur l'afficheur. Appuyez sur **ENTER,** et l'appareil fonctionnera grâce aux programmes intégrés. Pour revenir aux fonctions, appuyez sur **MENU**.

tEMP Température ambiante de la lampe

Appuyez sur **MENU** jusqu'à ce que tEMP s'affiche. Appuyez sur **ENTER** et la température de la tête où se trouve la lampe apparaîtra sur l'afficheur. Pour revenir aux fonctions, appuyez sur **MENU**.

FhrS Compteur de l'appareil

Appuyez sur **MENU** jusqu'à ce que FhrS clignote sur l'afficheur. Appuyez sur **ENTER** et le nombre d'heures d'utilisation de votre appareil apparaîtra sur l'afficheur. Pour revenir aux fonctions, appuyez sur **MENU**.

LAMP Lampe ON/OFF

Appuyez sur **MENU** jusqu'à ce que LAMP s'affiche. Appuyez sur **ENTER,** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir on (Lampe on) ou oFF (Lampe off). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pou un retour aux fonctions appuyez sur **MENU**.

LAMP Mode Lampe

Appuyez sur **MENU** jusqu'à ce que LAMP s'affiche. Appuyez sur **ENTER** l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour choisir on (Mode Lampe On) ou oFF (Mode Lampe off). Une fois que le mode a été choisi, appuyez sur **ENTER** pour valider ou le retour à l'état précédent se fera automatiquement après 8 secondes. Pour un retour aux fonctions appuyez sur **MENU**.

rSEt Reset (redémarrage)

Appuyez sur **MENU** jusqu'à ce que rSEt clignote sur l'afficheur. Appuyez sur **ENTER**, tous les canaux reviennent à leur position initiale. Pour revenir aux fonctions, appuyez sur **MENU**.
DMX RESET : réglez la valeur DMX du canal 16 de 200 à 209, tous les canaux reviennent à leur position initiale au bout de 5 secondes.

4.3 Ajustement de la position initiale

Appuyez sur **MENU** pendant 5 secondes pour entrer dans le mode d'excentrage et ajuster la position initiale, les fonctions sont alors les suivantes :

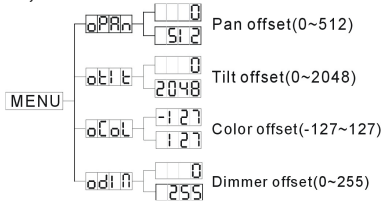

oPAn Excentrage de PAN

Appuyez sur **MENU** pendant 5 secondes pour entrer dans le menu d'excentrage, utilisez les boutons **DOWN** et **UP** jusqu'à ce que oPAn apparaisse sur l'afficheur. Appuyez sur **ENTER**, l'affichage clignote. Utilisez **DOWN** et **UP** pour ajuster la position initiale du PAN. Une fois la position choisie appuyez sur **ENTER** pour revenir automatiquement aux fonctions d'excentrage, et pour tout changement appuyez sur **MENU**, au bout de 8 secondes un retour automatique se fera vers les fonctions principales.

otiL Excentrage de Tilt

Appuyez sur **MENU** pendant 5 secondes pour entrer dans le menu d'excentrage, utilisez les boutons **DOWN** et **UP** jusqu'à ce que otiL apparaisse sur l'afficheur. Appuyez sur **ENTER** l'affichage clignote. Utilisez **DOWN** et **UP** pour ajuster la position initiale du TILT. Une fois la position choisie appuyez sur **ENTER** pour revenir automatiquement au fonctions d'excentrage, et pour tout changement appuyez sur **MENU**, au bout de 8 secondes un retour automatique se fera vers les fonctions principales.

oCoL Excentrage couleur

Appuyez sur **MENU** pendant 5 secondes pour entrer dans le menu d'excentrage. Utilisez les boutons **DOWN** et **UP** jusqu'à ce que oCoL apparaisse sur l'afficheur. Appuyez sur **ENTER**, l'affichage clignote. Utilisez les boutons **DOWN** et **UP** pour ajuster la couleur. Une fois la couleur sélectionnée, appuyez sur **ENTER** pour revenir automatiquement aux fonctions d'excentrage, et pour tout changement appuyez sur **MENU**, au bout de 8 secondes un retour automatique se fera vers les fonctions principales.

odin Excentrage Dimmer

Appuyez sur **MENU** pendant 5 secondes pour entrer dans le menu d'excentrage. Utilisez les boutons **DOWN** et **UP** jusqu'à ce que odin apparaisse sur l'afficheur. Appuyez sur **ENTER**, l'affichage clignote. Utilisez les boutons **DOWN** et **UP** pour ajuster le dimmer (0~255). Une fois le mode sélectionné, appuyez sur

ENTER pour revenir automatiquement aux fonctions d'excentrage, et pour tout changement appuyez sur **MENU**, au bout de 8 secondes un retour automatique se fera vers les fonctions principales.

5. Comment contrôler l'unité

Vous pouvez contrôler l'unité de 3 façons :

1. en mode maître / esclave pré programmé
2. avec une télécommande CA-8
3. avec un contrôleur DMX I SOLUTION ou un contrôleur DMX universel

5.1 mode maître / esclave pré programmé

En liant les unités en maître/esclaves, la première unité commandera les autres unités pour donner un show actif et synchronisé. Cette fonction est idéale quand vous voulez une utilisation instantanée.
La LED maître sera allumée et la LED sound clignotera en fonction de l'ambiance sonore.
Les autres unités devront être assignées en mode SLAVE (la LED slave s'allumera) choisissez le mode d'utilisation SH 1 (normal) ou SH 2 (le mode show 2 … etc.). Vous pouvez sélectionner show 1 ou show 2 ou show 3 ou show 4 avec le CA 8.

2-light show

En SLAd (mode esclave), SL 1 signifie un fonctionnement classique et SL 2 signifie un deuxième light show. Afin de créer un grand light show, vous pouvez placer SL 2 sur la deuxième unité pour obtenir des mouvements contrastés entre eux, même si vous avez deux unités seulement.

5.2. Contrôleur CA-8

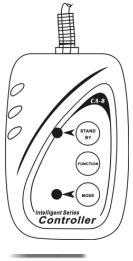

La télécommande CA 8 est employée seulement en mode maître/esclaves.
En se branchant sur la prise Jack 6.35 mm de la première unité, vous commanderez tout les autres unités reliées.

Stand by	Blackout the unit			
Function	Strobe 1. Color sync. strobe 2. Sync. strobe 3. Two-light strobe	X/Y moving show pattern selection (Show 1 ~ Show 4) Please refer to 4.2. Main Functions- Show mode	Color selection	X/Y moving setting 1.Pan position 2.Tilt position 3.Dimmer First set Master unit, then set Slave units' position
Mode	Sound 1 (LED off)	Sound 2 (LED normal blinking)	Slow/Sound 3 (LED on)	Position/ Latch (LED fast blinking)

5.3.1 Contrôleur DMX iSolution

- la liaison DMX permet à l'i Rock et l'i Show d'être piloté ensemble et commandé en même temps.
- l'adresse DMX peut être placée à distance par le contrôleur d'iLead (référez-vous svp au manuel d'utilisateur du contrôleur d'i Lead). Aucun besoin de calculer les canaux de DMX de chaque montage dans la chaîne.
- la commutation automatique des programmes entre la fonction DMX et la fonction maître/esclave est intégrée.

5.3.2 Contrôleur DMX universel

Si vous utilisez un contrôleur DMX universel pour commander les unités, vous devez placer l'adresse DMX de 1 à 512 canaux de sorte que les unités puissent recevoir le signal DMX.

Appuyez sur le bouton **MENU** jusqu'à que Addr s'affiche. Appuyez sur **ENTER** et l'affichage clignote. Naviguez avec les boutons **UP** et **DOWN** pour changer l'adresse DMX512.

Une fois que l'adresse a été choisie, appuyez et maintenez la touche **ENTER** jusqu'à ce que l'affichage cesse de clignoter ou il sera stocker automatiquement 8 secondes plus tard. Pour revenir aux fonctions, appuyez sur **MENU**.
Veuillez vous référer aux diagrammes suivants pour adresser vos canaux DMX512 pour les 4 premières unités.

16 Canaux：

8 Canaux :

L'adresse DMX peut être placée à distance par le contrôleur IL-0824. Aucun besoin de calculer les canaux DMX de chaque montage dans la chaîne (uniquement en Mode 8 canaux).

8 Canaux :

5.4. Configuration DMX 512

16 canaux :

DMX-512 Configuration

Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8
Pan	Tilt	Pan/Tilt speed	Dimmer	Shutter	Color	Cyan	Mangenta
540° 270° 0°	270° 135° 0°	255 Slow 0 Fast	255 100% 0 0%	248-255 Open 132-247 free shutter 131 Fast shutter 016 Slow shutter 008-015 Open 000-007 Blackout	255 Fast 192 Slow 191 Slow 128 Fast 109-127 Purple 091-108 Light blue 073-090 Green 055-072 Orange 037-054 Yellow 019-036 Red 000-018 White	255 100% 0 0%	255 100% 0 0%

Channel 9	Channel 10	Channel 11	Channel 12	Channel 13	Channel 14	Channel 15	Channel 16
Yellow	CMY Color Mix Macro	CMY Speed	Effect	Zoom	Pan 16 bit	Tilt 16 bit	Lamp On/Off /Reset
255 100% 0 0%	128-255 Macro 124-127 Color31 120-123 Color30 116-119 Color29 113-115 Color28 109-112 Color27 105-108 Color26 102-104 Color25 098-101 Color24 094-097 Color23 090-093 Color22 087-089 Color21 083-086 Color20 079-082 Color19 076-078 Color18 072-075 Color17 068-071 Color16 064-067 Color15 061-063 Color14 057-060 Color13 053-056 Color12 049-052 Color11 046-048 Color10 042-045 Color9 038-041 Color8 035-037 Color7 031-034 Color6 027-030 Color5 023-026 Color4 020-022 Color3 016-019 Color2 012-015 Color1 008-011 White 000-007 Open	255 Slow 0 Fast	240-255 Frost 033-239 Beam Shape Rotation 016-032 Beam Shppe 000-015 Open	255 28° 0 7°	255 16 BIT PAN 0	255 16 BIT TILT 0	255 239 Lamp off 230 209 Dmx reset 200 139 Lamp on 130 0 Normal

Pour un reset DMX, mettez la valeur DMX de CH-16 à 200-209, l'unité se remettra à zéro après environ cinq secondes.

Pour la lampe, mettez la valeur DMX de CH-16 à CH-130-139

Pour désactiver la lampe, mettez la valeur DMX de CH-16 à CH 230-239.

8 canaux :

DMX-512 Configuration

Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8
Pan	Tilt	Shutter	Effect Wheel	Color	CYM Color Mix /Macro	Dimmer	Zoom
540° 270° 0°	270° 135° 0°	248-255 Open 132-247 free shutter 131 Fast shutter 016 Slow shutter 008-015 Open 000-007 Blackout	240-255 Frost 033-239 Beam Shape Rotation 016-032 Beam Shppe 000-015 Open	255 Fast 192 Slow 191 Slow 128 Fast 109-127 Purple 091-108 Light blue 073-090 Green 055-072 Orange 037-054 Yellow 019-036 Red 000-018 White	128-255 Macro 124-127 Color31 120-123 Color30 116-119 Color29 112-115 Color28 108-111 Color27 104-107 Color26 100-103 Color25 096-099 Color24 092-095 Color23 088-091 Color22 084-087 Color21 080-083 Color20 076-079 Color19 072-075 Color18 068-071 Color17 064-067 Color16 060-063 Color15 056-059 Color14 052-055 Color13 048-051 Color12 044-047 Color11 040-043 Color10 036-039 Color9 032-035 Color8 028-031 Color7 024-027 Color6 020-023 Color5 016-019 Color4 012-015 Color3 008-011 Color2 004-007 Color1 000-003 White	255 100% 000 0%	255 28° 0 7°

5.5. Connexion DMX 512

Le DMX512 est employé couramment dans la commande intelligente de l'éclairage, avec un maximum de 512 canaux.

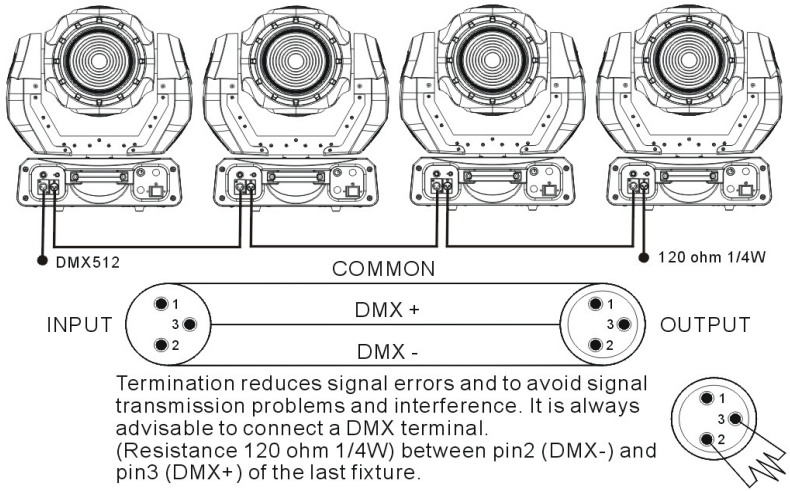

Termination reduces signal errors and to avoid signal transmission problems and interference. It is always advisable to connect a DMX terminal.
(Resistance 120 ohm 1/4W) between pin2 (DMX-) and pin3 (DMX+) of the last fixture.

1.Si vous employez un contrôleur avec une sortie DMX 5 broches, vous devez employer des câbles adaptateurs 5/3 broches XLR.
2.Les lignes DMX doivent être terminées avec un bouchon de terminaison. Soudez une résistance de 120 ohms 1/4W entre la borne 2 (DMX-) et la borne 3 (DMX+) dans un XLR 3 broches et raccordez le à la sortie DMX de la dernière unité.
3.Il n'y a aucun raccordement DMX possible en Y, ceci coupe le signal DMX
4.Chaque unité doit avoir une adresse DMX réglée pour recevoir les données envoyées par le contrôleur.
Le nombre d'adresse est entre 0-511 (habituellement 0 et 1 sont égaux à 1).
5.L'extrémité du système DMX512 devrait être terminée pour réduire les erreurs de signal.
Les branchements XLR
3 broches XLR : Borne 1 : La terre, borne 2 : Signal négatif (-), borne 3 : Signal positif (+)
5 broches XLR : Borne 1 : La terre, borne 2 : Signal négatif (-), borne 3 : Signal positif (+)

6. Dépannage

Suivent quelques problèmes communs qui peuvent se produire lors du fonctionnement. Voici certaines suggestions pour le dépannage:

A. L'unité ne fonctionne pas, aucune lumière et le ventilateur ne fonctionne pas
1. Vérifiez la puissance et le fusible principal.
2. Mesurez la tension sur le connecteur principal.
3. Vérifiez la tension sur la LED.

B. Ne répondant pas au contrôleur DMX
1. la LED DMX devrait être allumée sinon, le connecteur du contrôle DMX n'est pas raccordé correctement.
2. Si la LED DMX est allumée et qu il n'y a aucune réponse au canal, vérifiez les positionnements d'adresse et la Polarité du DMX.
3. Si vous avez des problèmes intermittents de signal DMX, vérifiez les connecteurs de l'unité défaillante et la précédente.
4. Essayez d'utiliser un autre contrôleur DMX.
5. Vérifiez l'absence d'interférence entre les câbles électriques.

C. Quelques unités ne répondent pas au contrôleur CA-8
1. Vous pouvez avoir une coupure dans le câblage DMX. Examinez la LED puis assurez vous de la réponse du signal en mode maître/esclave.
2. l'Adresse DMX de l'unité est fausse. Placez l'adresse appropriée.

D. Aucune réponse à la musique

1. Assurez vous que l'unité ne reçoit pas de signal DMX.
2. Vérifiez le microphone pour voir s'il est bon en tapotant légèrement dessus.

E. Un des canaux ne fonctionne pas bien
1. Le moteur pas à pas pourrait être endommagé ou le câble connecté à la carte électronique est cassé.
2. L'IC' d'entraînement du moteur sur la carte pourrait être hors service.

F. La lampe coupe par intermittence
1. La lampe ne fonctionne pas bien. Vérifiez si la tension principale n'est pas trop haute ou trop basse.
2.La température interne peut être trop élevée. Vérifiez et remplacez au besoin le ventilateur sur la tête.

G. Si la courroie de PAN est cassée

1. Coupez le courant principal.
2. Dévissez tous les vis (a) et ouvrez le capot du logement de base (b).
3. Dévissez tous les vis (c) et ouvrez le capot des bras (d).
4. Débranchez tout les fils qui relient les bras à la base.
5. Dévissez les vis (e) et enlevez la tête.
6. Desserrez les vis (f), puis desserrez les vis (G).
7. Changez la courroie (h), mettez la courroie autour de l'axe moteur.
8. Revissez les vis (G), installez la nouvelle courroie et ajustez sa tension correctement. Note : si elle est trop serrée elle peut se casser.
9. Rebranchez le tout (les fils entre la base et les bras).
10. Puis remontez en suivant les procédures du point 5 au point 2.

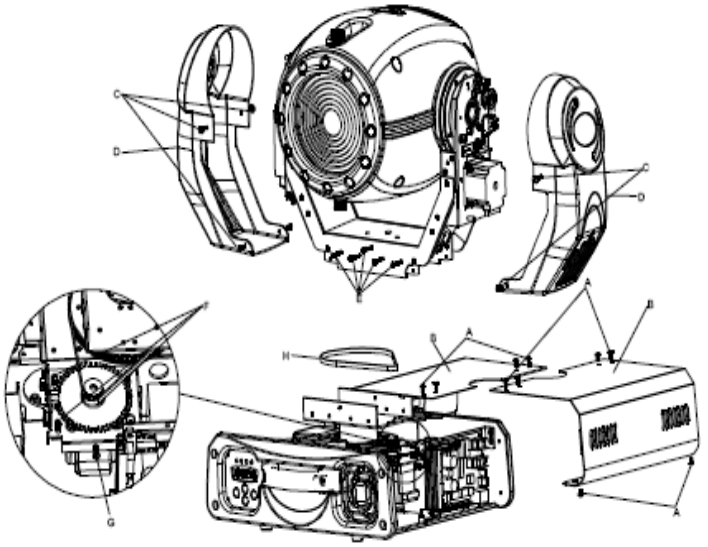

Faites attention à la tension de la courroie lorsque vous l'installez.

Référez vous aux photos ci-dessous.

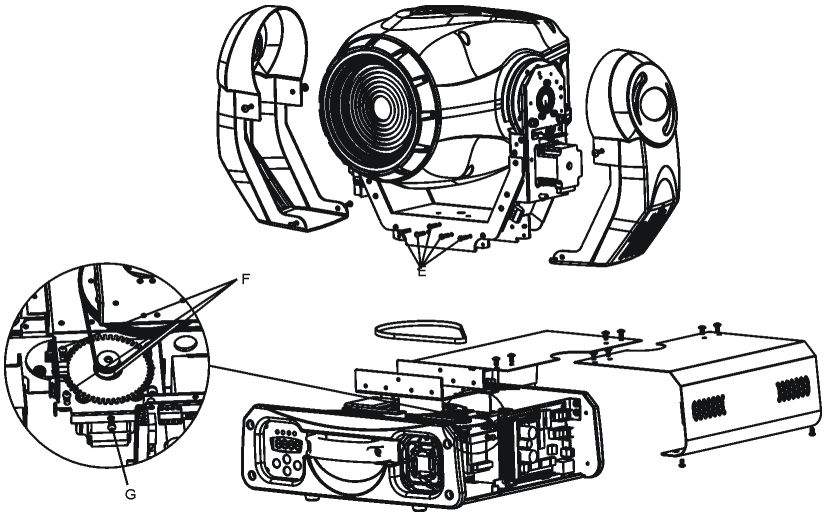

Photo 1

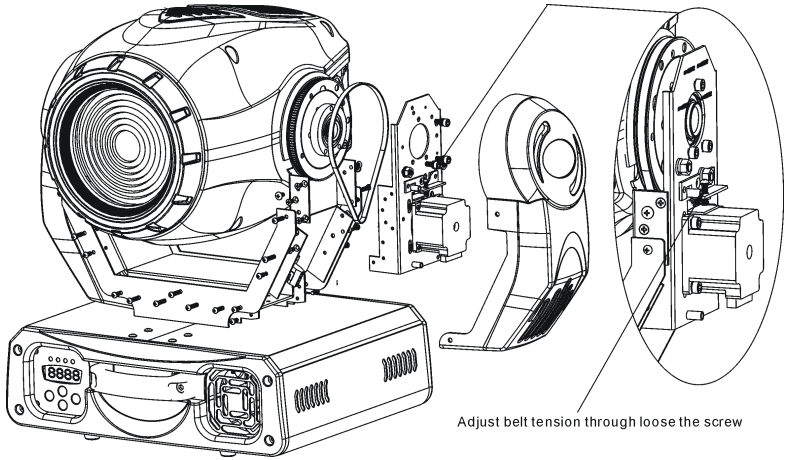

7. Nettoyage de l'unité

Le nettoyage des objectifs et/ou des miroirs optiques internes et externes doit être effectué de façon régulière, ceci afin d'optimiser le rendement lumineux. La fréquence de nettoyage dépend de l'environnement dans lequel l'unité fonctionne : humide, enfumé ou dans un environnement sale, ces conditions peuvent causer une plus grande accumulation de saleté sur le système optique de l'unité.

- Nettoyez avec un linge propre en utilisant un liquide de nettoyage pour vitres.
- Séchez toujours les pièces soigneusement.
- Nettoyez le système optique externe au moins tous les mois. Nettoyez le système optique interne au moins tout les 2 mois

TABLE OF CONTENTS

1. Safety Instruction

2. Technical Specification

3. Lamp

4. How To Set The Unit

4.1 Control Panel
4.2 Main Function
4.3 Home Position Adjustment

5. How To Control The Unit

5.1 Master/Slave Built-In Preprogrammed Function
5.2 Easy Controller CA-8
5.3 DMX Controller
5.4 DMX 512 Configuration
5.5 DMX 512 Connection

6. Troubleshooting

7. Fixture Cleaning

1. Safety Instruction

WARNING

Please read the instruction carefully which includes important information about the installation, usage and maintenance.

- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- The unit is designed for use with the MSD 575W or NSD 575W lamps. Do not use any other type of lamp.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The unit is for indoor use only. Use only in a dry location.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Disconnect main power before fuse/lamp replacement or servicing.
- Replace fuse/lamp only with the same type.
- Make sure there are no flammable materials close to the unit while operating, as it is fire hazard.
- Use safety chain when fixes this unit. Don't handle the unit by taking its head only, but always by taking its base.
- Maximum ambient temperature is Ta : 40℃. Don't operate it where the temperature is higher than this.
- Unit surface temperature may reach up to 85℃. Don't touch the housing bare-hand during its operation, and allow about 15 minutes to cool down before replacing bulb or serving, as the unit could be very hot.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance centre. Always use the same type spare parts.
- Don't connect the device to any dimmer pack.
- Do not touch any wire during operation as high voltage might be causing electric shock.

Warning

- To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- Never touch bulb with bare fingers, as it is very hot after using.
- Hot lamp explosion hazard. Do not open the unit within five minutes after switching off.
- Do not start on the unit without bulb enclosure or housing are damaged.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- Do not look directly at the light while the bulb is on.

Caution

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs by yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

Installation

The unit should be mounted via its mounting system (as shown below) on the bottom of the base. Use clamps to fix the unit to truss. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 50 kgs for each unit. Also always use a safety cable that can hold 10 times of the weight of the unit when installing the fixture.

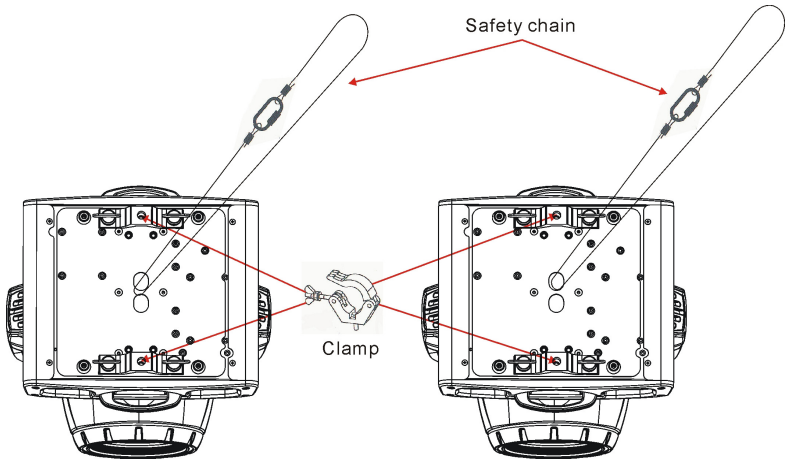

2. Technical Specification

- **Power supply**
  - AC 230V50Hz

- **Lamp**
  - MSD 575W or NSD 575W

- **Optical system**
  - High efficiency optical system
  - High quality optical lens and dichroic colors
  - Auto focus
  - Beam angle: 11° ~28°

- **Shutter/Dimmer**
  - Blackout, 0~100% smooth dimming and strobe speed variable (1~10 flashes per second)

- **Color wheel**
  - Independent color wheel with 9 dichroic colors plus white.
  - Color wheel rotates with variable speed, giving rainbow effect.

- **CMY Mixing system**
  - Cyan: 0 ~ 100%, Magenta: 0 ~ 100%, Yellow: 0 ~ 100%

- **Effect Wheel**
  - Frost filter and diagonal lens

- **Movement**
  - Pan: 540° in 2.8 second.
  - Tilt: 270° in 1.6 second.
  - Automatic pan/ tilt homing correction.

- **DMX Channels**

- Standard DMX 512 signal addressing and can be controlled by any universal DMX controller.

16 Channels:

Channel 1 = Pan	Channel 9 = Yellow
Channel 2 = Tilt	Channel 10 = CMY color Mix
Channel 3 = Pan/Tilt Speed	Channel 11 = CMY Speed
Channel 4 = Dimmer	Channel 12 = Effect Wheel
Channel 5 = Shutter	Channel 13 = Zoom
Channel 6 = Color	Channel 14 = Pan 16 bit
Channel 7 = Cyan	Channel 15 = Tilt 16 bit
Channel 8 = Magenta	Channel 16 = Lamp On/Off/Reset

8 Channels:

Channel 1 = Pan
Channel 2 = Tilt
Channel 3 = Shutter
Channel 4 = Effect wheel
Channel 5 = Color
Channel 6 = CYM Color Mix /Macro
Channel 7 = Dimmer
Channel 8 = Zoom

- **Dimension:** 428 x 387x 491 mm
- **Weight:** 30.5 kgs

Luminous intensity:

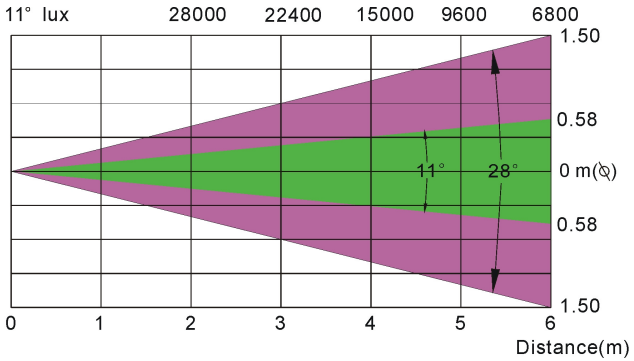

3. Lamp

WARNIG

In case of replacement of the lamp or maintenance, do not open the fixture within 15 minutes until the unit cools down after switching off.

Because of its high internal pressure, there might be a risk that the Discharge lamp would explode during operation. The lamp emits intense UV radiation which is harmful to the eyes and skin. The high luminance of the arc can cause severe damage to the retina if looks directly at the lamp.

Discharge lamp:

MSD 575W or NSD 575W

1. Always switch off the main supply and never handle the lamp or luminaire when it is hot.
2. Do not touch the bulb with bare hands. If this happens, clean the lamp with denatured alcohol and wipe it with a lint free cloth before installation.
3. The lamp generates UV radiation. Never operate the lamp without appropriate shielding.
4. When burning, the lamp operates at high pressure and there is a slight risk of arc tube rupture. The risk increases with age, temperature and improper handling of the lamp. Do not use the lamp any longer than its specified life.
5. Make sure the lamp is located in the center of the reflector for the best spot. Adjust lamp position by screws A, B and C.

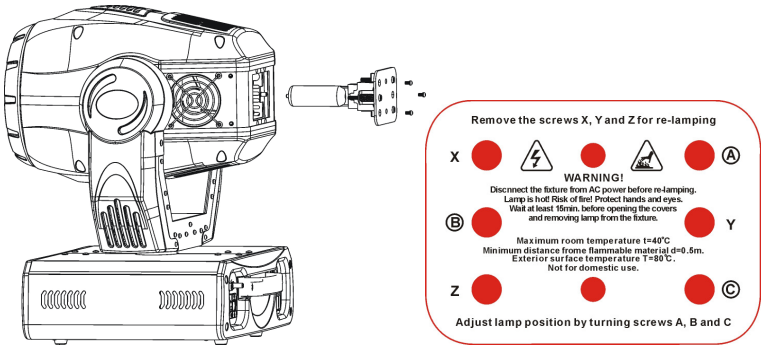
Remove the screws X, Y and Z for re-lamping
X
A
WARNING!
Disconnect the fixture from AC power before re-lamping.
Lamp is hot! Risk of fire! Protect hands and eyes.
Wait at least 15min. before opening the covers
and removing lamp from the fixture.
B
Y
Maximum room temperature t=40°C
Minimum distance frome flammable material d=0.5m.
Exterior surface temperature T=80℃.
Not for domestic use.
Z
C
Adjust lamp position by turning screws A, B and C

4. How To Set The Unit

4.1. Control Panel

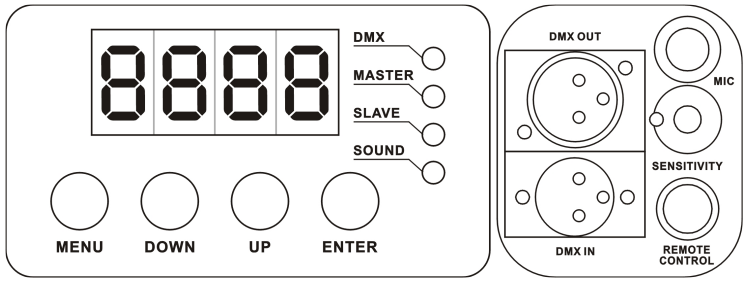

Display
To show the various menus and the selected functions.

LED

DMX	On	DMX input present
MASTER	On	Master mode
SLAVE	On	Slave mode
SOUND	Flashing	Sound activation

Button

MENU	To select the programming functions
DOWN	To go backward in the selected functions
UP	To go forward in the selected functions
ENTER	To confirm the selected functions

Remote controller input
By connecting to the 1/4" microphone jack to control the unit for Stand by, Function, and Mode function.

Sensitivity
To adjust the sound receives sensitivity.

Microphone
To receive audio signal for sound activated.

DMX input/output

For DMX 512 link, use 3-pin XLR plug cable to link the unit together.

4.2. Main Function

To select any of the pre-set functions, press the **MENU** button until the required one is shown on the display. Select the function by **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the mode. Once the required mode has been selected, press the **ENTER** button to setup or it will automatically return to the main functions without any change after idling 8 seconds. To go back to the functions without any change press the **MENU** button. The main functions are shown below:

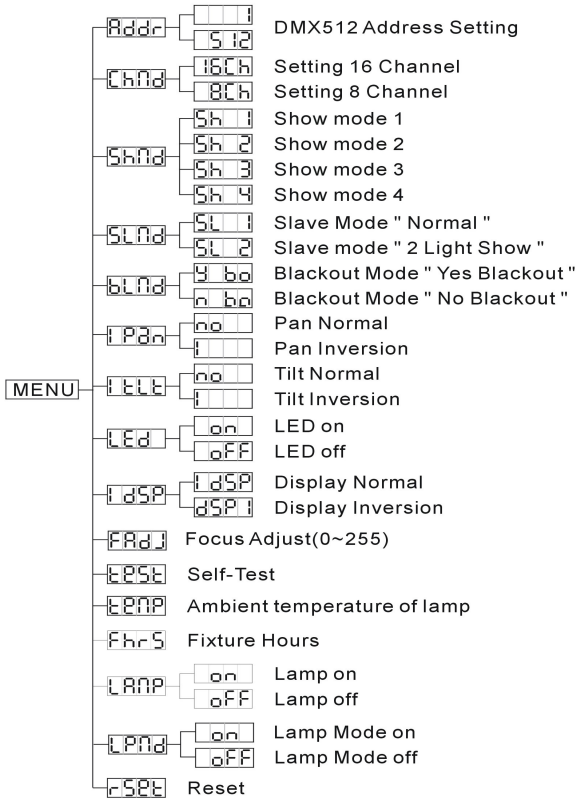

Addr DMX 512 Address Setting

Press the **MENU** button until the Addr is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the DMX 512 address.

Once the address has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions
without any change press the **MENU** button again.

ChAd Channel Mode

Press the **MENU** button until the ChAd is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the 16Ch (16 Channel) or 8Ch (8 Channel) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

ShAd Show Mode

Press the **MENU** button until the ShAd is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the Sh 1 (show 1) or Sh 2 (show 2) or Sh 3 (show 3) or Sh 4 (show 4) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

Sh 1 Show 1 mode - Fixture is placed on the floor. Tilt movement angle 210°.

Sh 2 Show 2 mode - Fixture is fixed under ceiling. Tilt movement angle 90°.

Sh 3 Show 3 mode - Fixture is placed on the speaker, The spot is always projecting to the audience's direction; i.e in front of the stage. Pan movement angle (left to right to left): 160°. Tilt movement angle: 90° (60° above horizon; 30° below horizon.)

Sh 4 Show 4 mode - Fixture is fixed under ceiling. The spot is mainly projecting in front of the stage. Pan movement angle (left to right to left) :160°. Tilt movement angle: 90° (vertically, front 75°; back 15°)

SLAd Slave Mode

Press the **MENU** button until the SLAd is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the SL 1 (normal) or SL 2 (2 light show) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main

functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

bLAd Blackout Mode

Press the **MENU** button until the bLAd is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the Y bo (yes blackout) or n bo (no blackout) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

IPAn Pan Inversion

Press the **MENU** button until the IPAn is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the no (normal) or I (pan inversion) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

ItLt Tilt Inversion

Press the **MENU** button until the ItLt is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the no (normal) or I (tilt inversion) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

LEd Led Display

Press the **MENU** button until the LEd is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the on (Led on) or oFF (Led off) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

Display Inversion

It is good for you to install the unit on the floor or under ceiling. Press the **MENU** button until the dSP is blinking on the display. Use the **ENTER** button to change to the mode dSP1 (display inversion), It will automatically store after 8 seconds. Or press the **ENTER** button again return to the mode dSP (display normal). To go back to the functions press the **MENU** button.

dSP Display normal mode for the fixture putting on the floor.

dSP1 Display inversion mode for the fixture fixing under ceiling.

Focus Adjust

Press the **MENU** button until the FAdJ is blinking on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the (0~255) value. Once the value has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. TO go back to the functions without any change press the **MENU** button again.

Self-Test

Press the **MENU** button until the tESt is blinking on the display. Pressing **ENTER** button and the unit will run self-test by built-in program. To go back to the functions press the **MENU** button again.

Ambient temperature of lamp

Press the **MENU** button until the tEMP is blinking on the display. Pressing **ENTER** button and the ambient temperature of lamp will show on the display. To go back to the functions press the **MENU** button again.

Fixture Hours

Press the **MENU** button until the FHrS is blinking on the display. Pressing **ENTER** button and the display will show the number of working hours of the unit. To go back to the functions press the **MENU** button again.

Lamp ON/OFF

Press the **MENU** button until the LAMP is blinking on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select

the on (Lamp on) or oFF (Lamp off) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

Lamp Mode

Press the **MENU** button until the LPMd is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the on (Lamp mode on) or oFF (Lamp mode off) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

Reset

Press the **MENU** button until the rSEt is blinking on the display. Pressing **ENTER** button and all channels of the unit will return to their standard position. To go back to the functions press the **MENU** button again.

DMX RESET :

Set DMX value of channel 16 to 200~209, then all channels of the unit will return to their standard home position after about 5 seconds.

4.3 Home Position Adjustment

Press **MENU** button for at least 5 seconds into offset mode to adjust the home position, the functions are shown below:

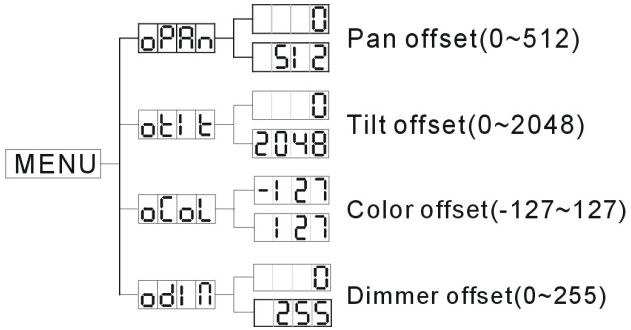

Pan offset

Press the **MENU** button for at least 5 seconds into offset mode, use **DOWN** and **UP** button until the oPAn is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to adjust the pan home position. Once the position has been selected, press the **ENTER** button

to setup or automatically return to the offset functions without any change press the **MENU** button again, to go back to the main functions without any change after 8 seconds.

Tilt offset

Press the **MENU** button for at least 5 seconds into offset mode, use **DOWN** and **UP** button until the tilt is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to adjust the tilt home position. Once the position has been selected, press the **ENTER** button to setup or automatically return to the offset functions without any change press the **MENU** button again, to go back to the main functions without any change after 8 seconds.

Color offset

Press the **MENU** button for at least 5 seconds into offset mode, use **DOWN** and **UP** button until the CoL is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to adjust the color home position. Once the color has been selected, press the **ENTER** button to setup or automatically return to the offset functions without any change press the **MENU** button again, to go back to the main functions without any change after 8 seconds.

Dimmer offset

Press the **MENU** button for at least 5 seconds into offset mode, use **DOWN** and **UP** button until the dIn is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to adjust the dimmer home position(0~255). Once the mode has been selected, press the **ENTER** button to setup or automatically return to the offset functions without any change press the **MENU** button again, to go back to the main functions without any change after 8 seconds.

5. How To Control The Unit

You can operate the unit in three ways:

1. By master/slave built-in preprogram function
2. By easy controller CA-8

3. By IL-0824 (please refer to the user guide of iLead controller) or by universal DMX controller

No need to turn the unit off when you change the DMX address, as new DMX address setting will be effected at once. Every time you turn the unit on, it will show 575U on the display and move all the motors to their 'homing' position. You may hear some noises for about 20 seconds. After the progress will be ready to receive DMX signal or run the built-in programs.

5.1. Master/Slave Built-In Preprogrammed Function

You can select blackout mode bLnd in Y bo (yes blackout) or n bo (no blackout) mode while the unit is turned on. By linking the units in master/slave connection, the first unit will control the other units to give an automatic, sound activated, synchronized light show. This function is good when you want an instant show. You have to select show (show 1, 2, 3, 4) modes by easy controller . Its DMX input jack will have nothing plugged into it, and Its master LED will be constantly on and sound LED will flash to the music. The other units will have to set in slave mode SLnd and select SL 1 (normal) or SL 2 (2 light show) mode, Their DMX cables plugged into the DMX input jacks (daisy chain) and the slave LED lights will constantly on.

2-light show

In SLnd (slave mode), SL 1 means the unit works normally and SL 2 means 2-light show. In order to create a great light show, you can set SL 2 on the second unit to get contrast movement to each other, even if you have two units only.

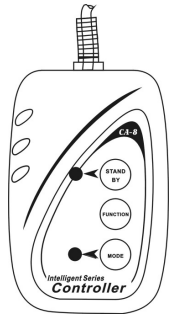

5.2. Easy Controller CA-8

The easy remote control is used only in master/slave mode. By connecting to the 1/4" microphone jack of the first unit, you will find that the remote control on the first unit will control all the other units for Stand by, Function and Mode.

Stand by	Blackout the unit			
Function	Strobe 1. Color sync. strobe 2. Sync. strobe 3. Two-light strobe	X/Y moving show pattern selection (Show 1 ~ Show 4) Please refer to 4.2. Main Functions-Show mode	Color selection	X/Y moving setting 1.Pan position 2.Tilt position 3.Dimmer First set Master unit, then set Slave units' position

Mode	Sound 1 (LED off)	Sound 2 (LED normal blinking)	Slow/Sound 3 (LED on)	Position/ Latch (LED fast blinking)

5.3.1 i Solution Operation

- Consistent DMX configuration enable iRock and iShow to be linked and controlled together at the same time.
- DMX address can be set remotely by iLead controller (please refer to the user manual of iLead controller). No need to calculate the DMX channels of each fixture in the chain.
- Automatic switching between DMX function and built-in stand alone programs.

5.3.2 DMX Controller

If you use a universal DMX controller to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.
Press the **MENU** button until the Addr is shown on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the DMX 512 address. Once the address has been selected, press and keep **ENTER** button pressed until the display stops blinking or storing automatically 8 seconds later. To go back to the functions without any change press the **MENU** button again.
Please refer to the following diagram to address your DMX 512 channel for the first 4 units.

16 Channels： 

8 Channels：

You have to set the fixture' show mode in 8 channels mode when you use IL-0824 controller. DMX start address can be set remotely by IL-0824 controller. No need to calculate the DMX channels of each fixture in the chain.
Please refer to the following diagram to address your DMX 512 channel for the first 4 units.

8 Channels：

5.4. DMX 512 Configuration

16-channel Mode DMX configuration

DMX-512 Configuration

Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8
Pan	Tilt	Pan/Tilt speed	Dimmer	Shutter	Color	Cyan	Mangenta
					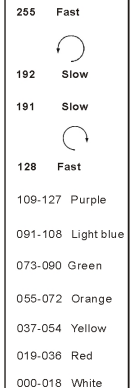		

Channel 9	Channel 10	Channel 11	Channel 12	Channel 13	Channel 14	Channel 15	Channel 16
Yellow	CMY Color Mix Macro	CMY Speed	Effect	Zoom	Pan 16 bit	Tilt 16 bit	Lamp On/Off /Reset
	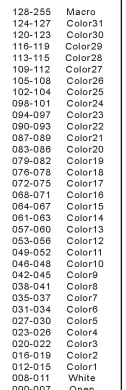				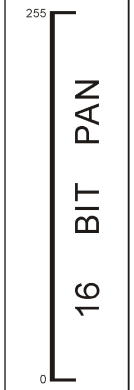		

i.) The value as below will be effected after about five seconds,
For DMX reset, put DMX value of CH-16 to 200-209
For DMX lamp on, put DMX value of CH-16 to 130-139.
For DMX lamp off, put DMX value of CH-16 to 230-239.

8-channel Mode DMX configuration

DMX-512 Configuration

Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8
Pan	Tilt	Shutter	Effect Wheel	Color	CYM Color Mix /Macro	Dimmer	Zoom
 540°	270°	248-255 Open	240-255 Frost	255 Fast	128-255 Macro	255 100%	255 28°
		132-247 free shutter			124-127 Color31		
				192 Slow	120-123 Color30		
		131 Fast shutter		191 Slow	116-119 Color29		
					112-115 Color28		
			033-239 Beam Shape Rotation	128 Fast	108-111 Color27		
 270°	135°			109-127 Purple	104-107 Color26		
					100-103 Color25		
				091-108 Light blue	096-099 Color24		
					092-095 Color23		
				073-090 Green	088-091 Color22		
			016-032 Beam Shppe		084-087 Color21		
		016 Slow shutter		055-072 Orange	080-083 Color20		
					076-079 Color19		
					072-075 Color18		
				037-054 Yellow	068-071 Color17		
		008-015 Open			064-067 Color16		
				019-036 Red	060-063 Color15		
					056-059 Color14		
					052-055 Color13		
					048-051 Color12		
					044-047 Color11		
					040-043 Color10		
					036-039 Color9		
					032-035 Color8		
					028-031 Color7		
					024-027 Color6		
					020-023 Color5		
					016-019 Color4		
					012-015 Color3		
					008-011 Color2		
					004-007 Color1		
0°	0°	000-007 Blackout	000-015 Open	000-018 White	000-003 White	000 0%	0 7°

5.5. DMX 512 Connection

The DMX 512 is widely used in intelligent lighting control, with a maximum of 512 channels.

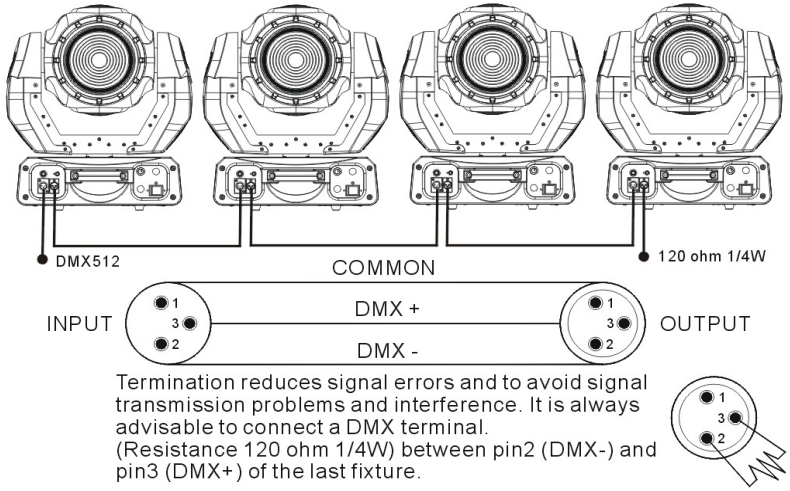
DMX512
COMMON
120 ohm 1/4W
INPUT
DMX +
DMX -
OUTPUT
1
3
2
Termination reduces signal errors and to avoid signal transmission problems and interference. It is always advisable to connect a DMX terminal.
(Resistance 120 ohm 1/4W) between pin2 (DMX-) and pin3 (DMX+) of the last fixture.

1. If you use a controller with 5 pins DMX connector, you need to use a 5 to 3 pin adapter.
2. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120-ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
3. Connect the unit together in a “daisy chain” by XLR plug from the output of the unit to the input of the next unit. The cable cannot be branched or split to a “Y” cable. DMX512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
4. The DMX output and input connectors are pass-through to maintain the DMX circuit, when power is disconnected to the unit.
5. Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).
6. The end of the DMX512 system should be terminated to reduce signal errors.
7. 3 pin XLR connectors are more popular than 5 pins XLR.
   3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

6. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work, no light and the fan does not work

1. Check the connect power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

B. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check in the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. Some units don't respond to the easy controller

1. You may have a break in the DMX cabling. Check the LED for the response of the master/ slave mode signal.
2. Wrong DMX address in the unit. Set the proper address.

D. No response to the sound

1. Make sure that the unit is not receiving DMX signal.
2. Check microphone to see if it is good by tapping the microphone

E. One of the channels is not working well

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

F. The lamp is cutting out intermittently

1. The lamp is not working well. Check the main voltage either too high or too low.
2. Internal temperature may be too high. Check and if necessary replace the fan on the head.

G. Pan Belt is broken

1. Turn off the main power.
2. Unscrew all the screws (A) and open the base-housing cover (B).
3. Unscrew all the screws (C) and open the arm cover (D).
4. Unplug all the connect wires that from the arm to the bottom.
5. Unscrew the screws (E) and remove the fixture head.
6. Loose the screws (F), then loose the screws (G).
7. Change a new belt (H) , put the belt around the axis gear and motor gear.
8. Screwed the screws (G), install the new belt and adjust the belt tension properly. Note: do not fix belt too tight as it is easy to rupture.
9. Plug all the connect wires back that from the bottom to the arm.
10. Reverse the procedures from point 5 to point 2.

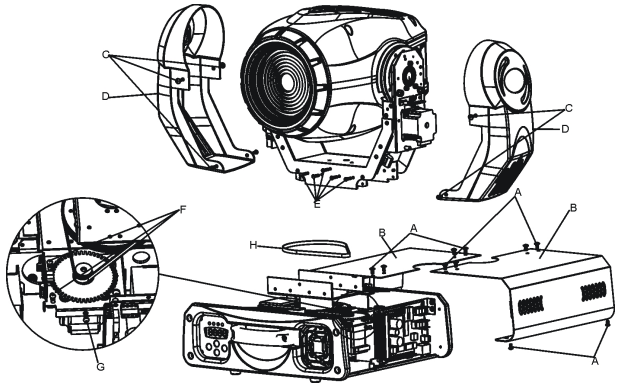

Pay attention to the belt tension when install the belt.

Please refer to the photos below:

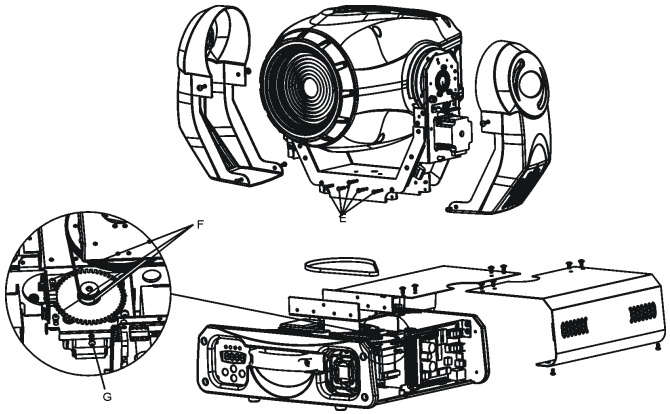

Photo 1

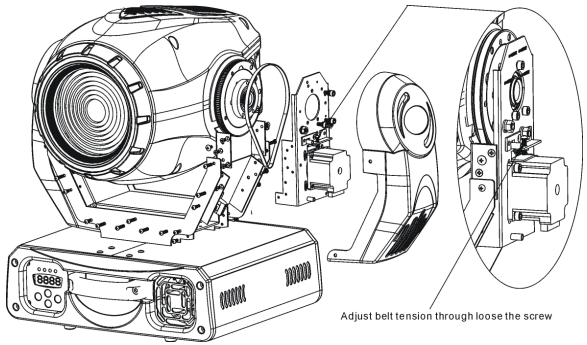

Photo 2

7. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.

Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

EC Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55014-2: 1997 A1:2001, EN61000-4-2: 1995; EN61000-4-3:2002;
EN61000-4-4: 1995; EN61000-4-5: 1995, EN61000-4-6:1996,
EN61000-4-11: 1994.
&
Harmonized Standard

EN 60598-1: 2004
IEC 60598-1:2003+ corrigendum 2004
Part 1:General requirements and test

Following the provisions of the low voltage directive 73/23/EEC and 93/68/EEC